

MANUAL

SIBERIA X DRIVING LIGHT 7" & 9"

(PIN1)RED: + High beam
(PIN2)BLACK: (-) Negative
(PIN3)WHITE: +White position light
(PIN4)YELLOW: +Amber position light

Cover included in package:

Dark cover and yellow flood cover

*In case if you need Clear flood cover you need to buy separate part nr 270963 for 7" or 270965 for 9" according to lamp size.

Default Setting: Xperience mode

Always start from the "off" state, meaning the light must have been turned off for at least five seconds to discharge any internal power.

To switch to E-mode:

1. Turn off the high beam for 5 seconds.
2. Turn the high beam on and let it run for 2 seconds.
3. Then, quickly flash the high beam 3 times within 5 seconds.

Switching back to Xperience mode:



1. Turn off the high beam for 5 seconds.
2. Turn the high beam on and let it run for 2 seconds.
3. Then, quickly flash the high beam 3 times within 5 seconds.

*This mode from batch nr 48495 and production after 2025-07-20, old batch doesn't have reset mode. New batch will have new manual with reset mode.

To Reset: (Default mode)

Regardless of the actual mode, if you flashes light rapidly 10 times within 20 seconds, it will immediately reset to Xperience mode. This feature is designed for situations where multiple lights have inconsistent power settings and need to be quickly unified to same setting.

Hello Function: This function is activated by flashing the high beam twice within 2 seconds. To use this mode, ensure a position light wire is connected.

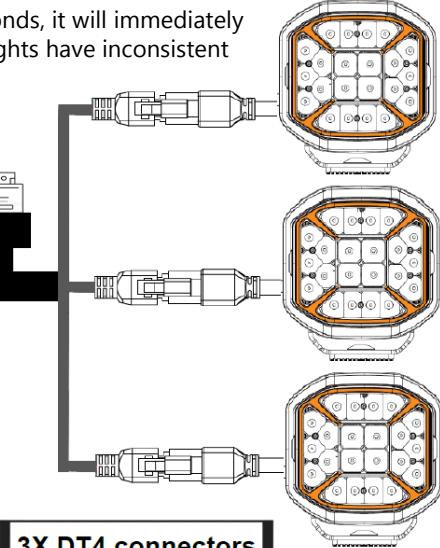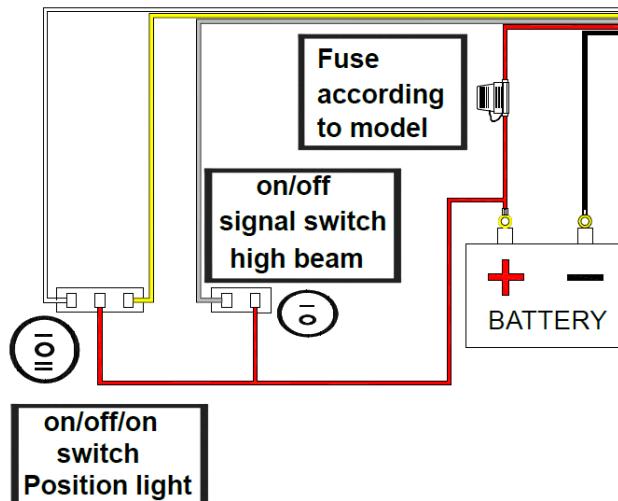

(The lights can be connected with an AUX switch, CANBUS solution with signal wire, By connecting signal wire with original cable with car main high beam by using strands cable kit like 270479(3x DT4) or a similar type of cable kit.)

Note: Dark cover will be already mounted on the lamp, remove cover carefully. **Do not use a dark cover while the high beam is on.**

*Cover remover tool is included in package.

(Part no. 270960, 270961)

*No fuse, 15cm cable with DT4 and pig tail, hello function


Contact us if you need support: support@strands.se or +46(0)320-450450



www.strands.se
www.strandseurope.com

strands[®]

-lighting division

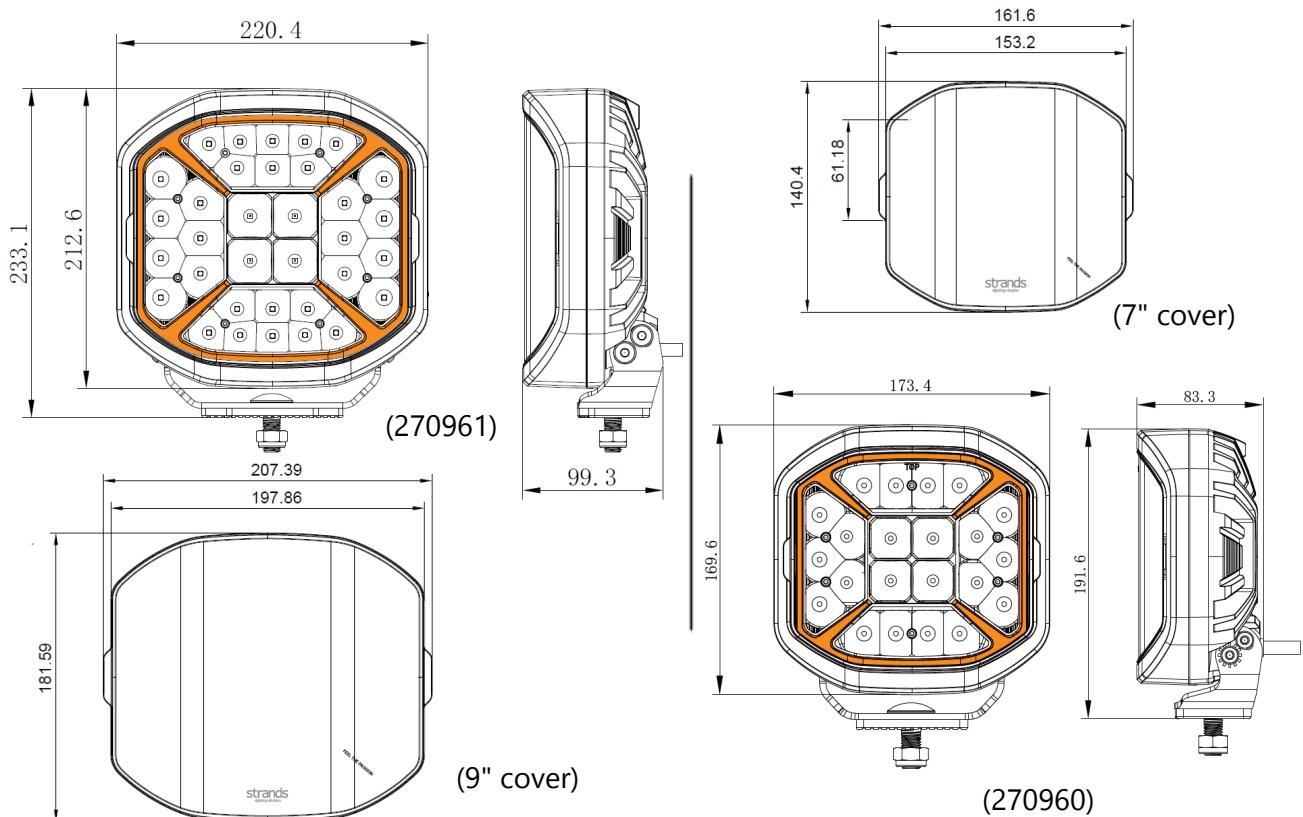

Troubleshooting:

1. Ensure the car's engine is running and the battery is in good condition when switching modes.
2. When connecting two or more lights, use a suitable wire (not too long or thick) and connect them all together in one wire. Check the voltage between the power supply and light wires to ensure it is above 10V.
3. For changing modes, use a proper switch or method and ensure it doesn't introduce any extra delay.
4. Avoid excessively fast switching. Ensure each flash takes between 0.8 and 2 seconds, with 3 continuous flashes.
5. If you are experiencing issues with changing modes, ensure the position light is off while turning on the high beam.

READ THIS BEFORE INSTALLATION

READ ALL INSTRUCTIONS AND STUDY DIAGRAMS BEFORE INSTALLING YOUR NEW LIGHTS!

LEGAL MOUNTING

Check with state or local authorities for laws governing usage and proper mounting of your new lights.

TAKE CARE OF YOUR PRODUCT

Keep the product clean. Dirt on the lens and heat-sink may shorten the products lifetime. Top cover can clean with normal water and cloth, Do not use any sharp material to rub on it.

Follow the degreasing instructions carefully and rinse off gently with cold or lukewarm water on low pressure.

WARNING!

Strong chemicals should not be used on the product. If you accidentally get strong chemicals on the product, rinse off immediately, use plenty of water so that no chemicals remain in any joint.

Some chemicals have a small amount of solvent in them, this can dissolve sealing adhesives and compromise the product's waterproofness.

Some chemicals pull out liquid from plastic and rubber-based components, which makes the plastic or rubber brittle and bursts more easily.

Be careful not to use high water pressure close up on the product.

If you use high water pressure at short distances, most products find it difficult to close out the water.

INSTALLATION

If there is a contact/connector on the product, it should not be cutted. If the connector is cut, the warranty is not valid.

If the product has loose cable and no connector. If the cable is shorter than 50 cm, the cable must not be cutted. If the cable is cut, the warranty is not valid.

If the cable is longer than 50 cm, it is ok to shorten the cable, but not shorter than 50 cm.

If the cable is cut shorter than 50 cm, the warranty is not valid.

Tighten screws and bolts so that they do not loosen or chafe. Incase of improper mounting and cover burned or damaged due to improper handling warranty will be void.

Do not tighten screws so hard that the protective bearings on the product breaks.

WARNING!

Do not use higher voltage than the product description states. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.

Contact us if you need support: support@strands.se or +46(0)320-450450



www.strands.se
www.strandseurope.com